



Connected to shore power

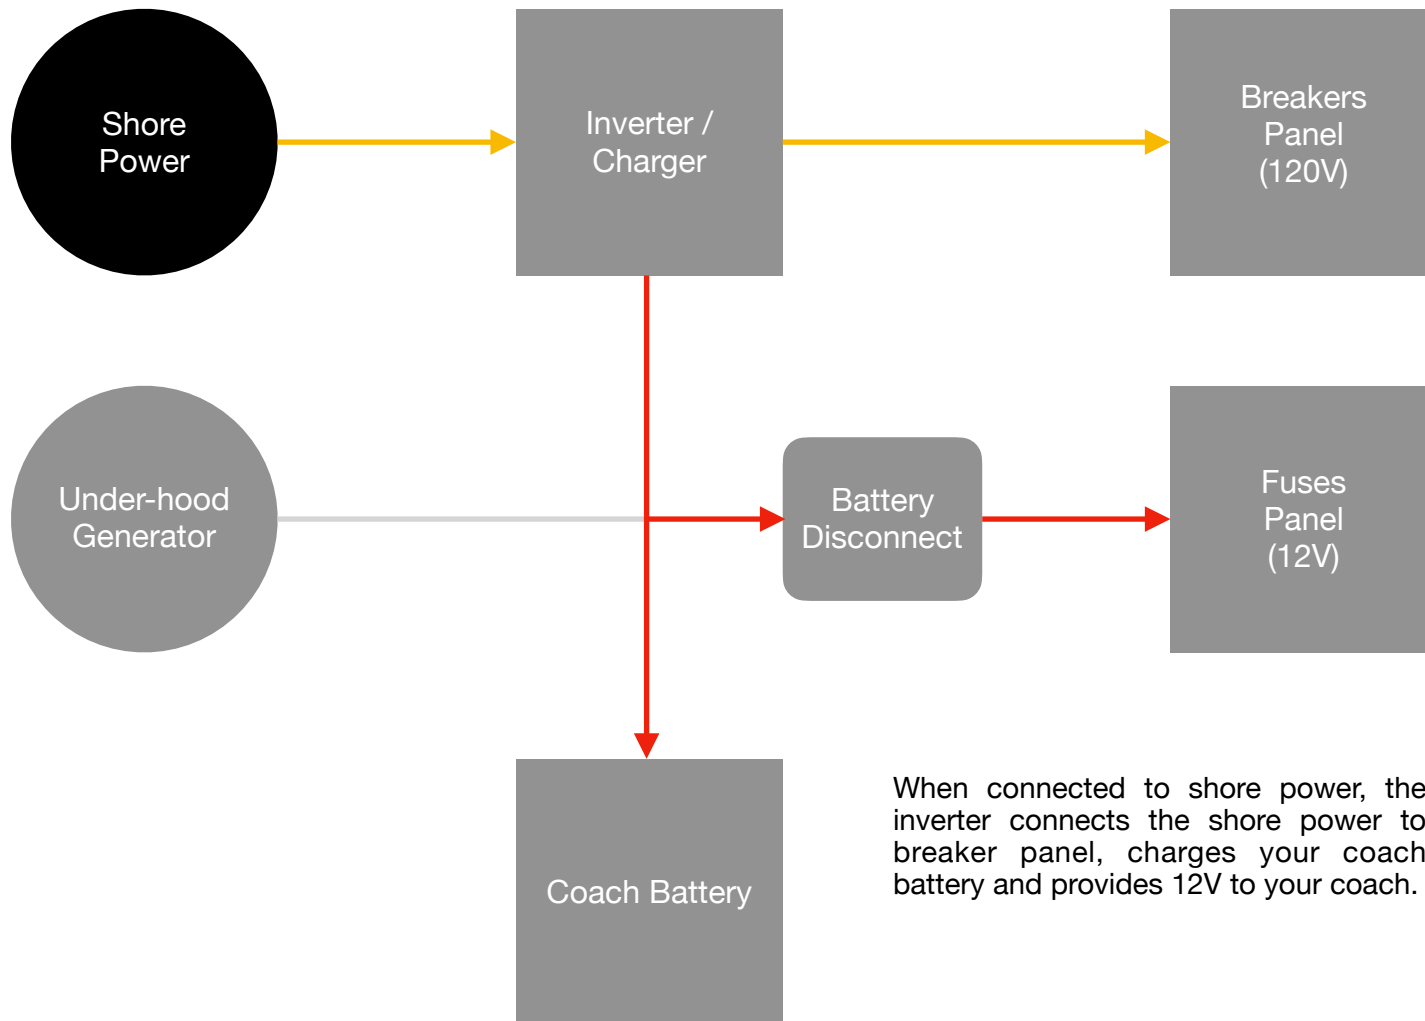

When connected to shore power, the inverter connects the shore power to breaker panel, charges your coach battery and provides 12V to your coach.

Boondocking

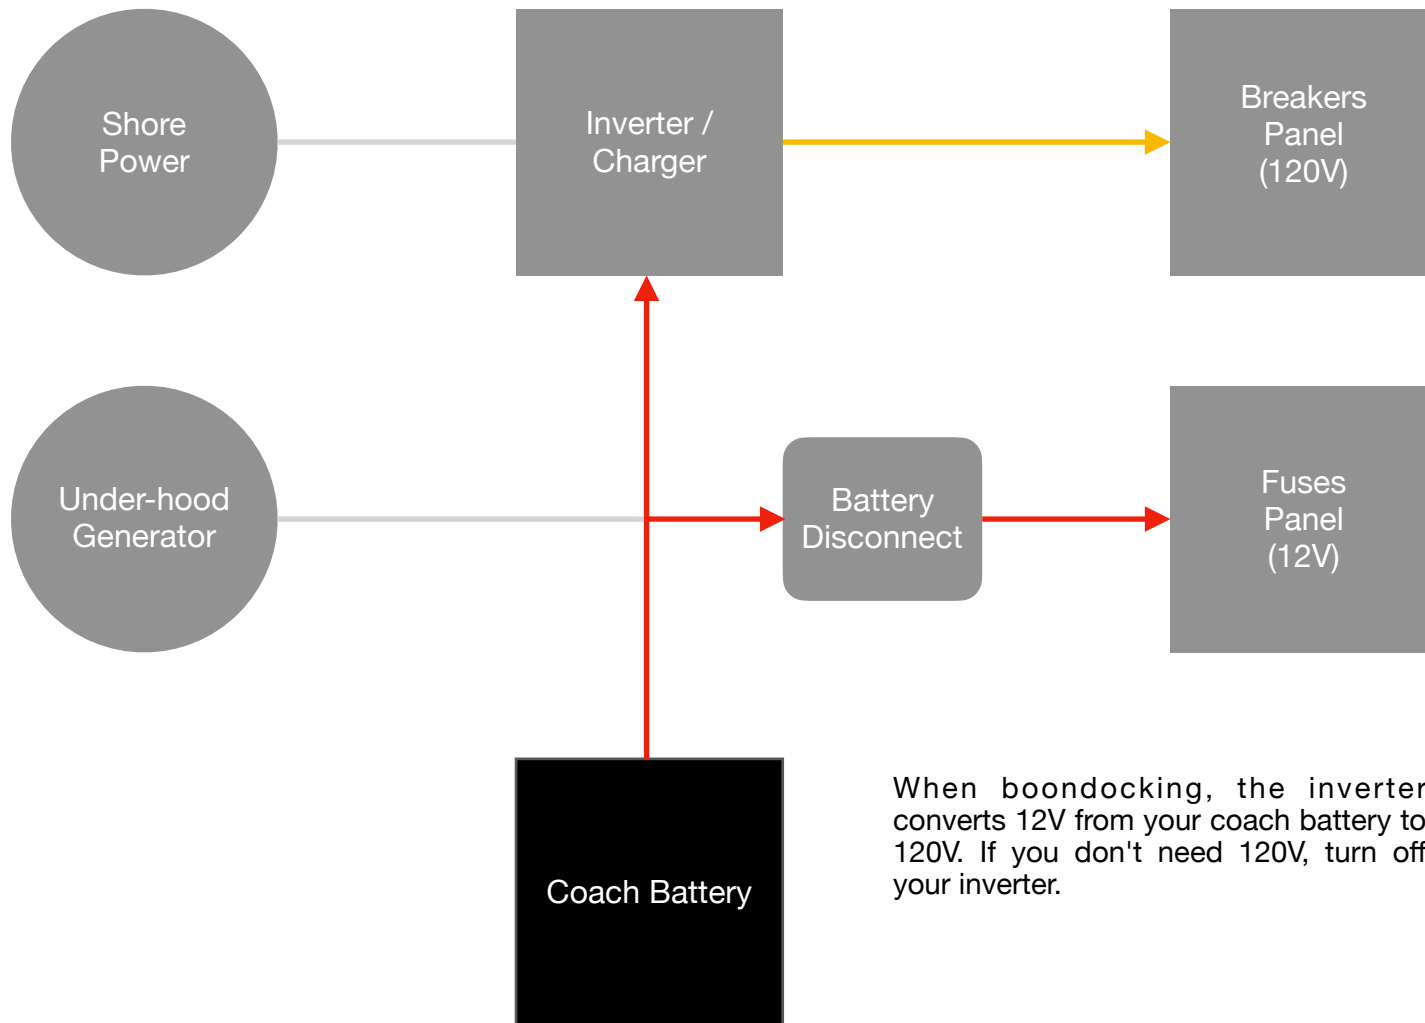

Engine running

